

Scoreboard Stand

IMPORTANT!!!

 
 
FarmTek, Inc.
1000 N Hwy 78, Suite D
Wylie, TX 75098

(800) 755-6529
(972) 429-0947
<http://farmtek.net>



- 1) The scoreboard stand should only be used to hang one of the following products:
 - FarmTek Seven Inch LED Scoreboard
 - FarmTek Ten Inch LED Scoreboard
- 2) The stand is stable when placed on a hard, flat surface without wind. Stability is compromised when the stand is set on softer surfaces (e.g., grass or dirt) and when wind is present. *Use reasonable judgment each time the stand is used as to whether the ground and weather conditions allow for safe use of the stand.*
- 3) Wear and tear of the scoreboard stand and its associated hardware can affect the integrity and stability of the stand. *Carefully inspect all tubing sections, joints and hardware each time the scoreboard stand is used.*
- 4) As FarmTek, Inc. cannot control the proper use and maintenance of the stand, or the ground and weather conditions in which the stand is used, ***FarmTek, Inc. assumes no liability for any damages that may occur to the scoreboard, scoreboard stand, or any items struck by the scoreboard or scoreboard stand, in the event the stand or associated hardware fails for any reason.*** This includes, but is not limited to, damage that may occur due to mechanical failure of any part of the stand, even if said failure is the result of original defects in the stand. *Always carefully inspect the stand and hangers each time it is used.*

Follow these instructions to assemble the stand for use:

- 1) Loosen the knob that allows expansion of the three legs at the bottom of the stand. Spread the three legs to the desired size and then tighten the knob.
- 2) Place the crossbar onto the pole at the top of the stand. (You may have to pull the top pole out of the stand a bit if it has dropped down into the stand too far.) Tighten the knob to hold the crossbar in place.
- 3) Slide a hanger over each bolt on the crossbar.
- 4) Slip the U-Bolts on the top of the scoreboard into the quick-links hanging from the stand. Screw each quick link closed.

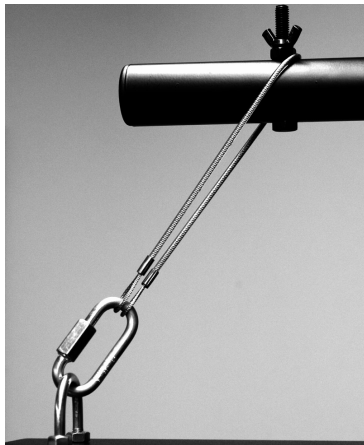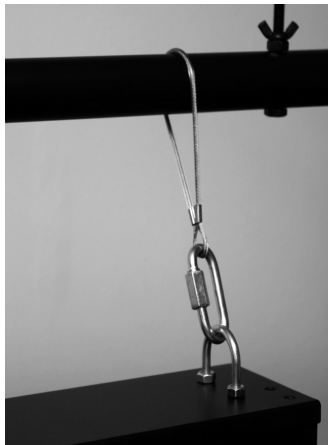

- 5) Raise the scoreboard to the desired height by loosening the coupling knobs and extending pole sections. Have a helper hold down the base of the stand while you are extending the pole sections. Securely tighten the coupling knobs after the height adjustment is complete.

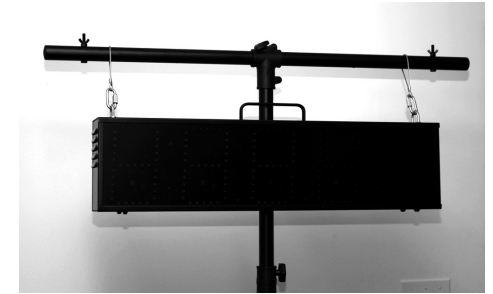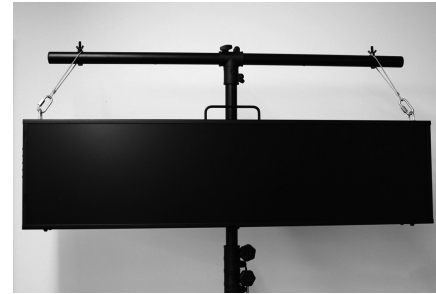

Notes:

- Adhere the felt bumper provided to the back of the scoreboard, very close to the top, where the scoreboard strikes the stand.
- Orient the scoreboard stand so that one of the tripod legs extends directly forward underneath the scoreboard.

