


External Long Range (Yagi) Antenna

Mount the Yagi antenna to a pole so the antenna is at least four feet off the ground and within a few feet of the electric eye. Point the antenna towards the timer console in the announcer's booth as shown below.

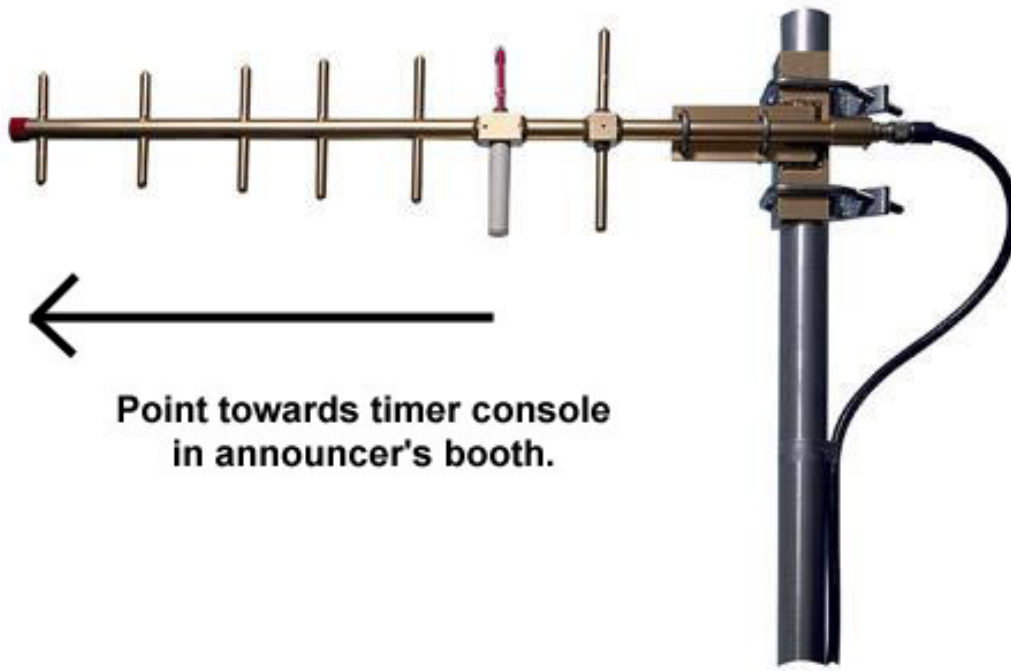

(Your antenna may look slightly different than pictured above)

Remove the small antenna from the electric eye by unscrewing it counter-clockwise. ***Look carefully for a black plastic washer at the bottom of the antenna – do not drop or lose the washer.*** Put the antenna and washer into a small zip-lock bag and store the bag in the carrying case.

Connect the cable provided from the antenna connector on the electric eye to the connector on the Yagi Antenna.